

(THIS SHEET ONLY)

-
- Diagram illustrating the interior of a fountain lighting control cabinet. The diagram shows the following components and their locations:
- LIC-16**: Two units, one on the left and one on the right, connected to the main power lines.
 - MB-353130**: A component located on the left side, connected to the main power lines.
 - INSTALL IN ELEVATOR FIT**: A label pointing to the location where the surge suppressor and panel 1HSL should be installed.
 - L2B-15**: A component located in the center of the cabinet, connected to the main power lines.
 - PANEL 1HSL**: A component located on the right side, connected to the main power lines.
 - FOUNTAIN LIGHTING PANEL (1 OF 2) THIS PANEL IS FURNISHED BY FOUNTAIN EQUIP. MANUFACTURER**: A label pointing to the location where the fountain lighting panel should be installed.
 - CONTACTORS AND THERMOSTATS**: A label pointing to the location where the contactors and thermostats should be installed.

E-104 SCALE: 1/8" = 1'-0"

E-104
of

ROBERDS
CONSULTING
ENGINEERS
455 EAST PACES FERRY ROAD, N.E.
SUITE 300
ATLANTA GEORGIA 30305
TELEPHONE (404) 237-8632
FACSIMILE (404) 237-4161