




REVISIONS

#	DATE

A NEW
EMS
FACILITY
FOR:

OCONEE
COUNTY

WATKINSVILLE,
GEORGIA

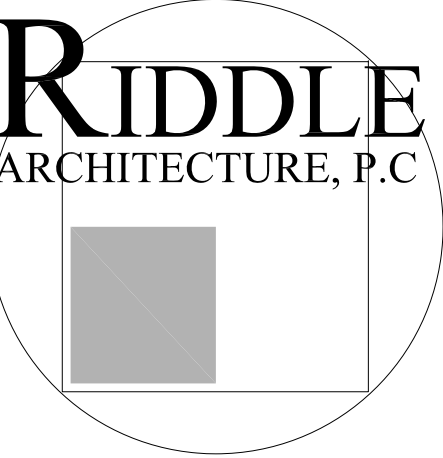

497 BROOMSEDGE COURT
BOLIVIA, NC
28422
(404) 285-8646



TITLE: ROOF
PLAN

JOB #: 2502

DATE: 09.11.26

SHEET #

A3

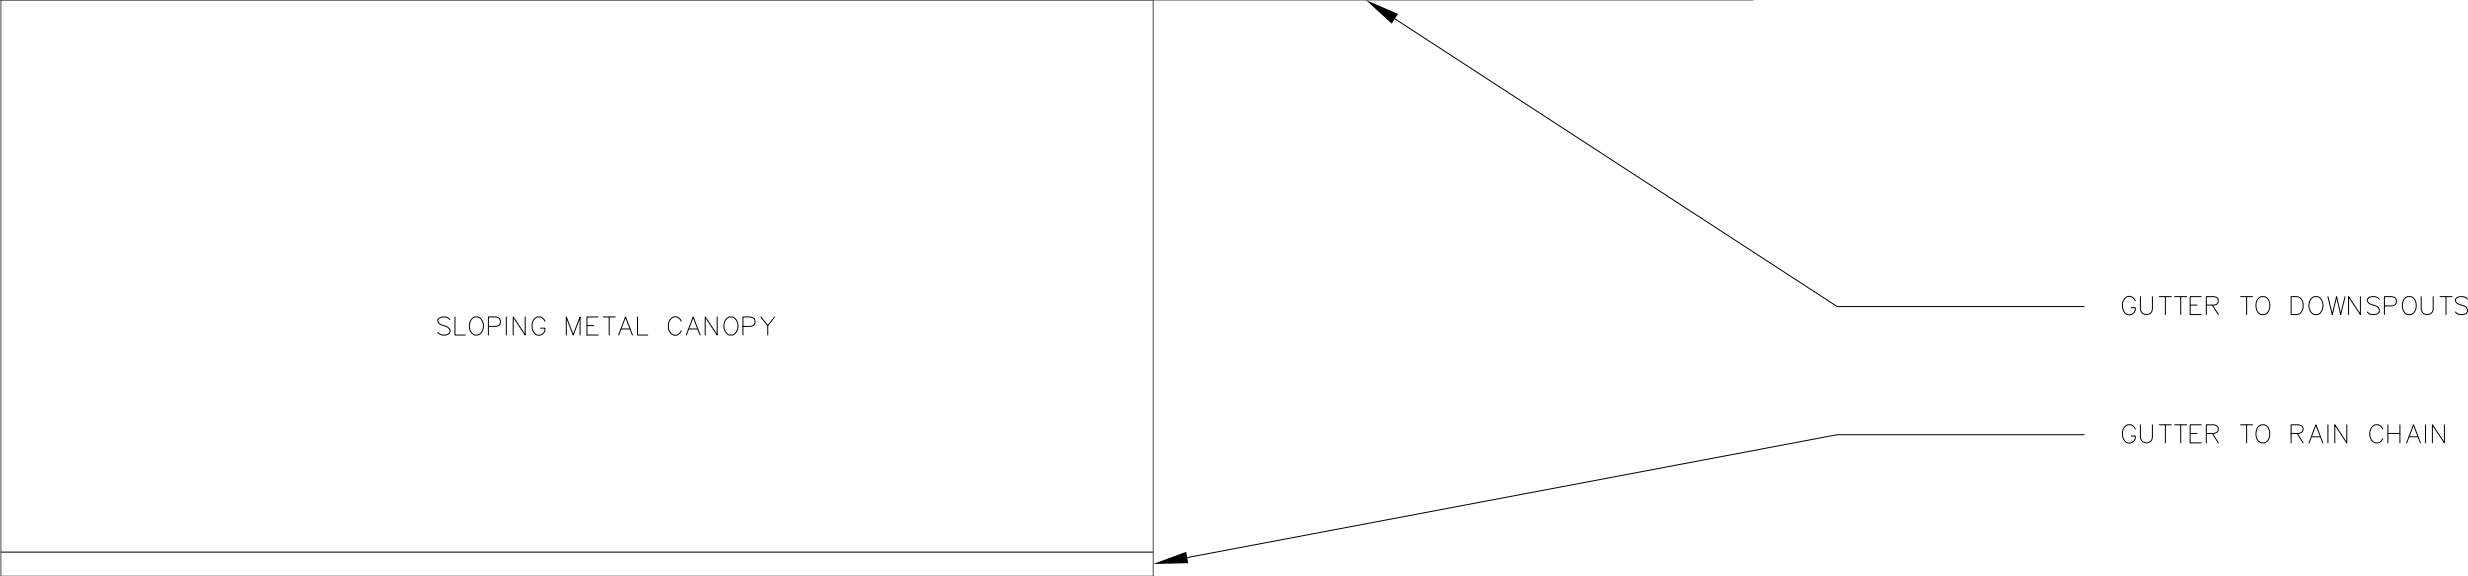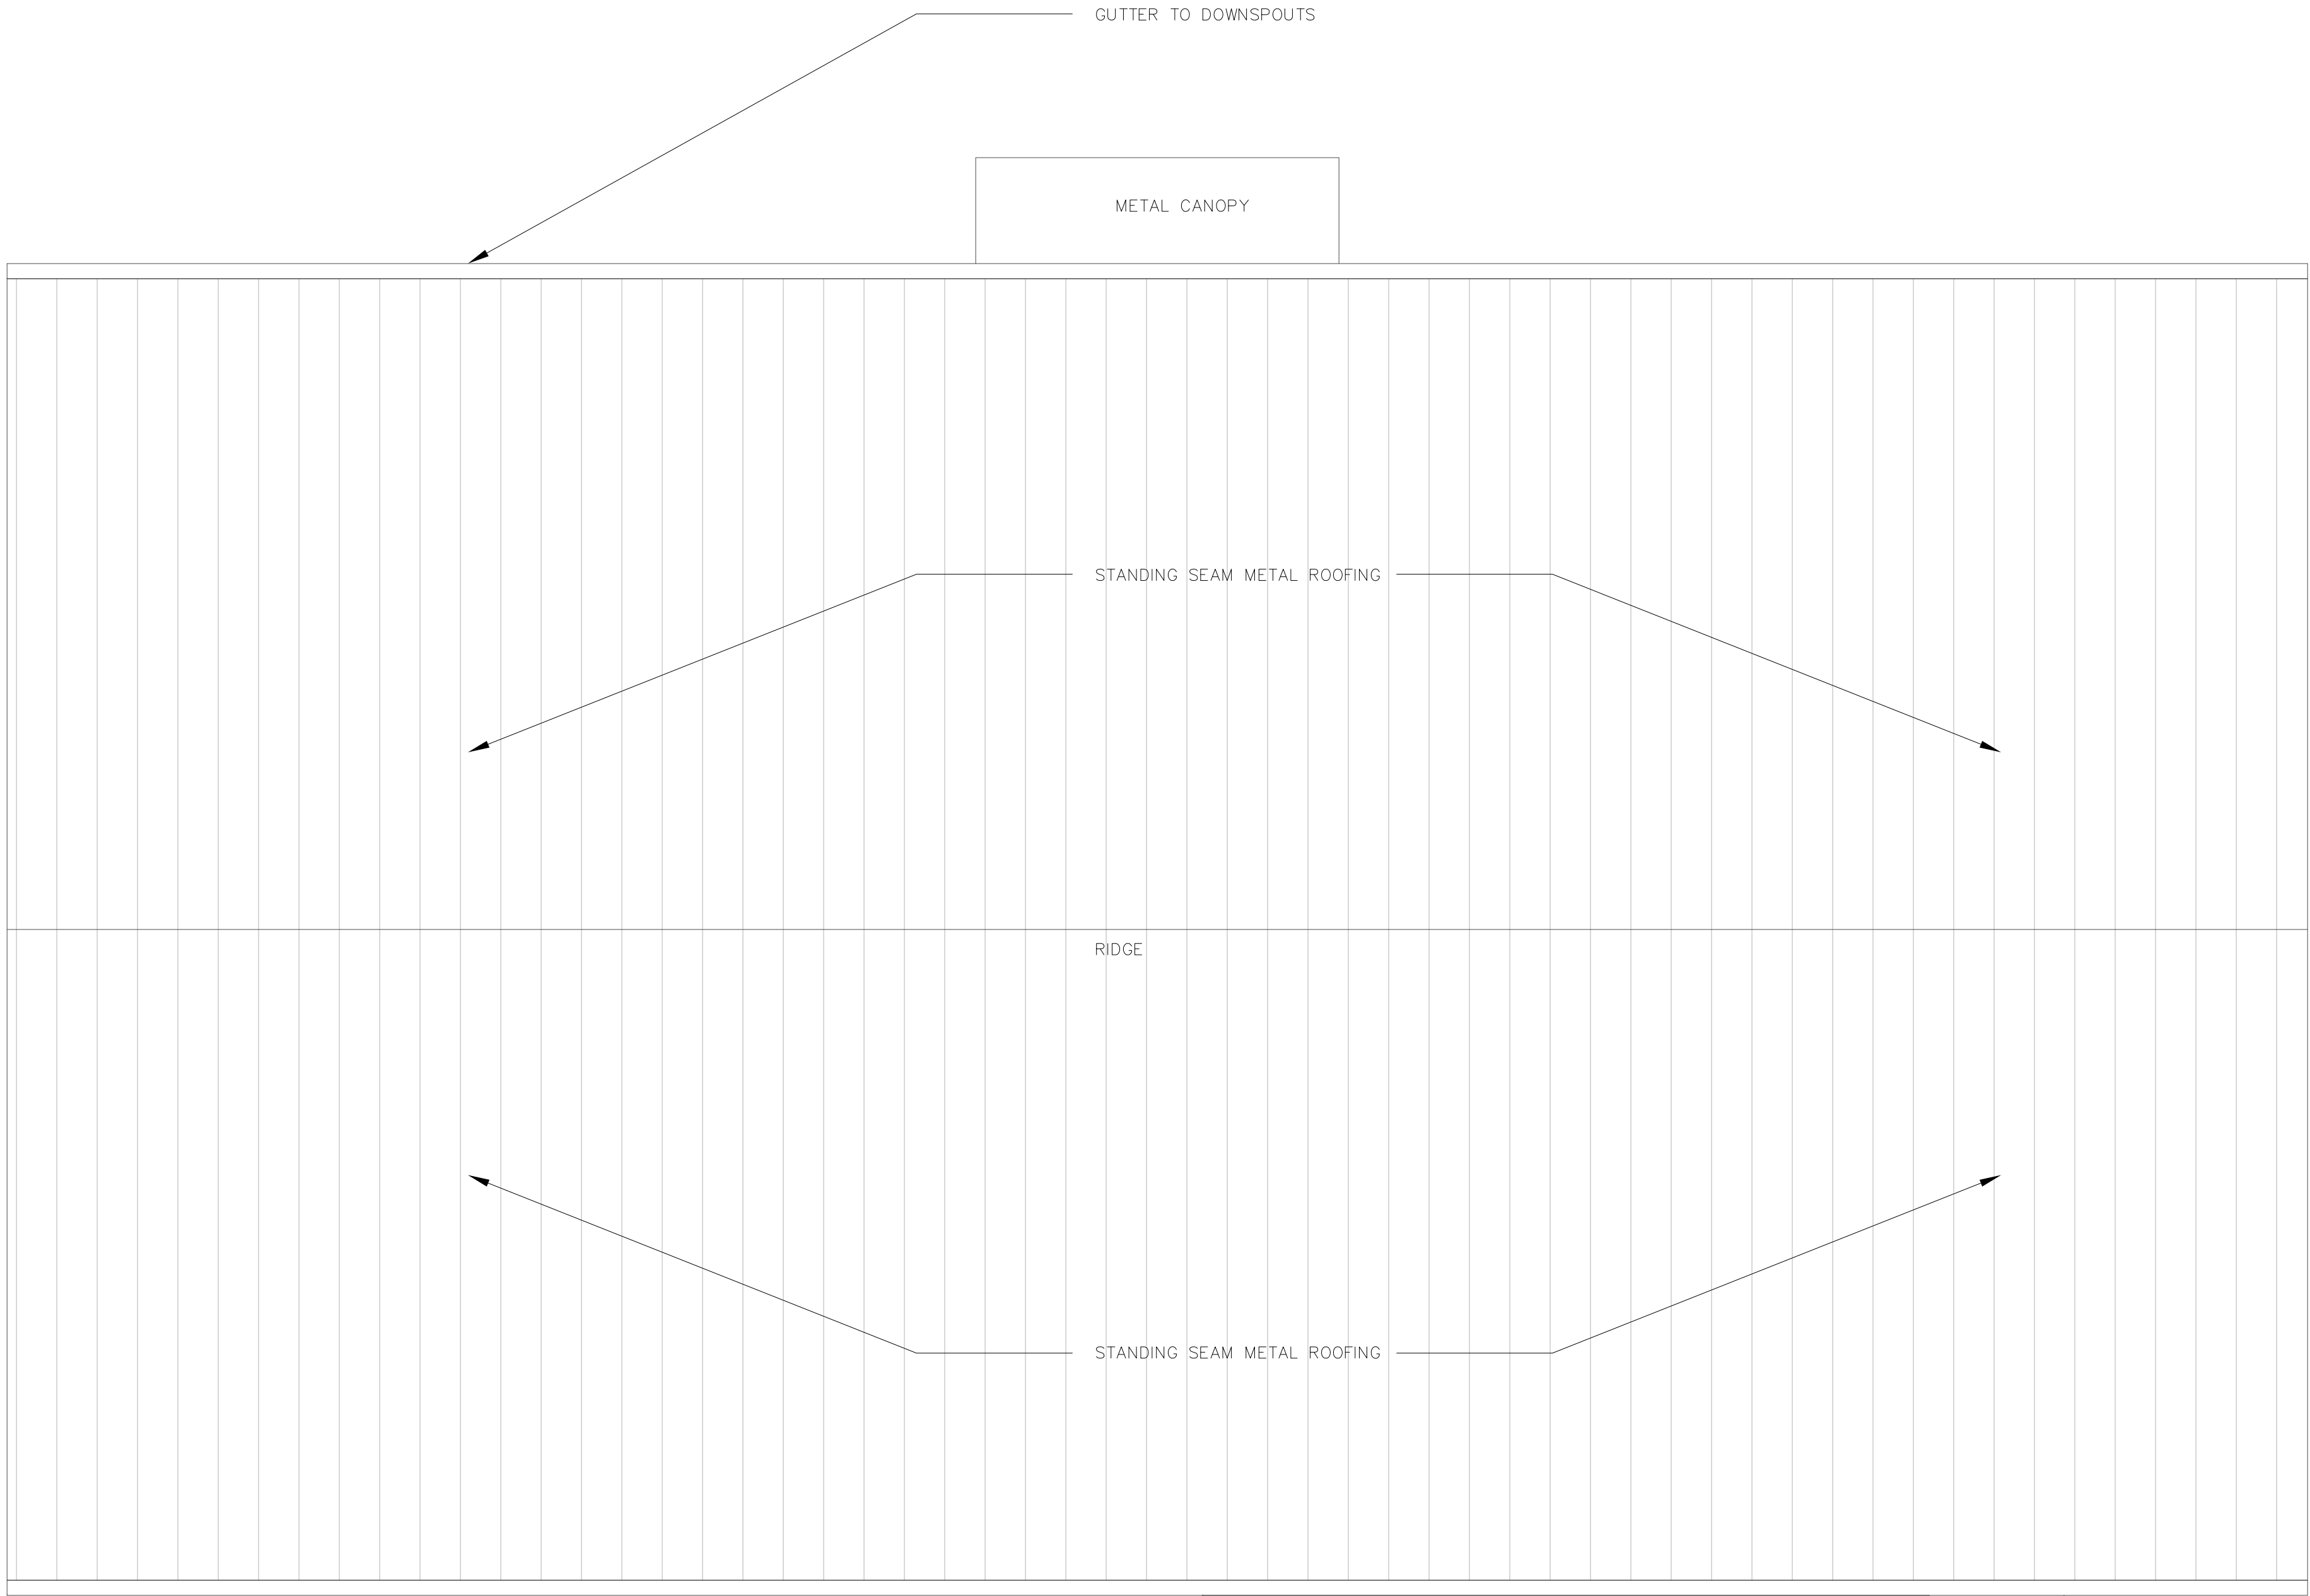


USE (4) POP RIVETS MK. H1100 AT ALL ELBOW, "S", AND DOWNSPOUT CONNECTIONS U.N.O.


ERECTOR NOTES:
1. MITERING OF THE "S" WILL BE REQUIRED AT SLOPES OVER 4:12 FOR PROPER LINE UP WITH THE DOWNSPOUT.

2. IF PROJECT CONTRACT SPECIFIES "S" SHAPES AT THE BOTTOM OF THE DOWNSPOUT IN LIEU OF ELBOWS, SEE DETAIL GA0105.

3. LOCATE ONE DOWNSPOUT STRAP AT EVERY "S" ELBOW AND DOWNSPOUT SPlice.

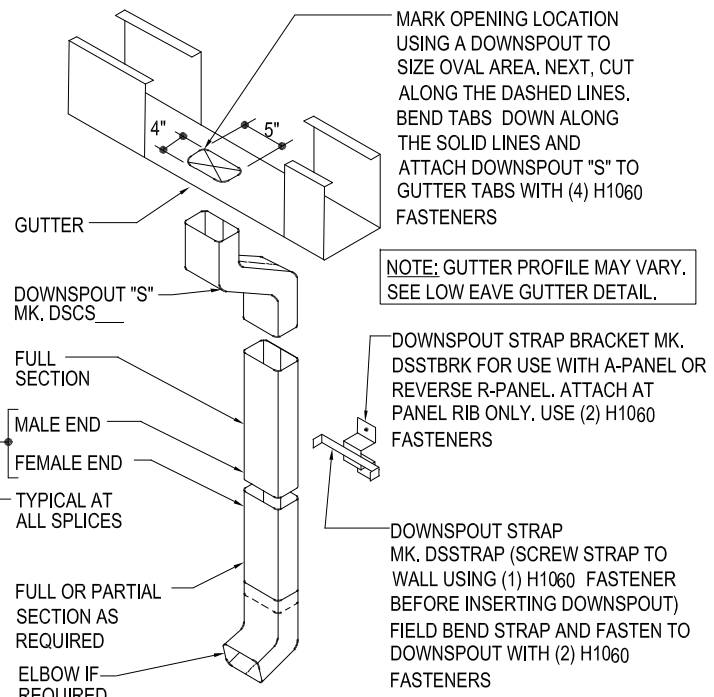

DOWNSPOUT STRAP (MK. DSSTRAP) AND STRAP BRACKETS (MK. DSSTRBK) ARE ALSO PROVIDED FOR MASONRY WALL APPLICATIONS AS WELL AS FOR ATTACHMENT TO COLUMNS. FASTENERS TO MASONRY ARE NOT PROVIDED. H1060 FASTENERS ARE PROVIDED FOR COLUMN ATTACHMENT APPLICATIONS. PRE-DRILLING WILL BE REQUIRED.

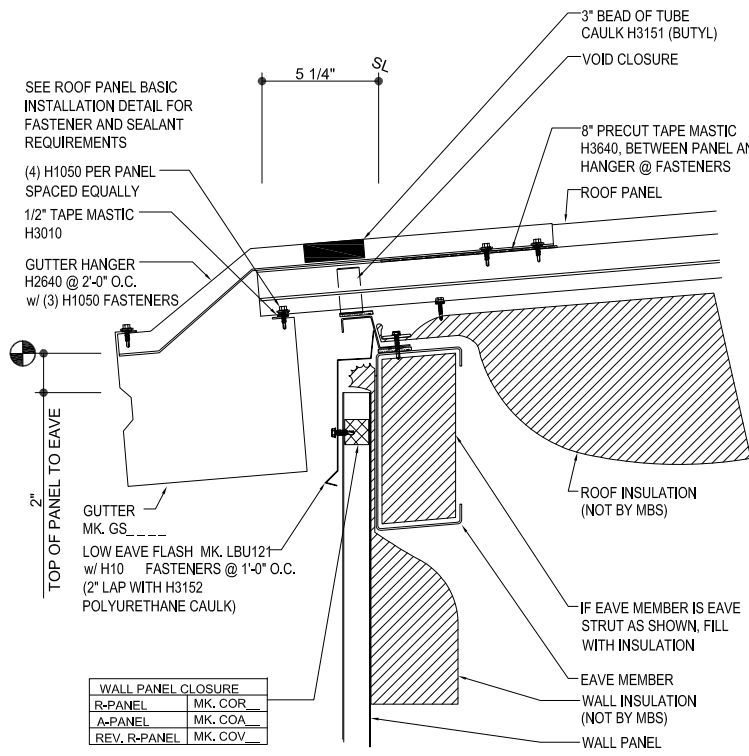

ON-SLOPE GUTTER DETAIL
EAVE GUTTER DETAIL w/ WALL PANELS
SEE WALL SHEETING DETAIL NOTES FOR WALL PANEL FASTENER LOCATIONS

2 DOWNSPOUT DETAIL

SCALE: NTS

3 ON-SLOPE GUTTER DETAIL

SCALE: NTS